

AU | Installation Instructions

tretford | ROLL



AU | Installation Instructions - tretford ROLL

INSTALLATION INSTRUCTIONS

These instructions must be followed to retain Manufacturer's Warranties.

Installation guidelines on tretford architectural folders and the international website do not apply to Australian tretford installations. For the latest published guidelines, please refer to www.gibbonarchitectural.com.au.

General Information

The following instructions are to be reviewed in conjunction with AS/NZS 2455.1:2019 prior to installing tretford ROLL carpet. The information supplied in these instructions are general and may not cover all subfloor conditions. For subfloor conditions not covered by these instructions please contact your local representative for guidance on how to proceed.

Gibbon Architectural will not be held responsible or warrant any tretford product that is not installed in accordance with these instructions and procedures.

All tretford products delivered should be inspected prior to installation to ensure the following:

- The correct style and colour have been supplied
- The correct quantity has been delivered
- That where applicable the correct dye lot has been delivered
- No transport damage has occurred. Please note that if there is any sign of transport damage, please photograph the damage before opening packaging and send the photos to your local representative as soon as possible.

DO NOT install any tretford ROLL products if any of the above issues are noted.



AU | Installation Instructions - tretford ROLL

Pre-Installation Requirements

CROSS CHECK: Installers, please note that once you cut the carpet you own it. Installers must remember to check colour, quantity, and batch against your order before use.

Acclimatisation:

At times of extreme humidity changes it is recommended to allow the Rolls to acclimatise on site for a period of 24 hours before installation in the area in which it is to be laid. **Please be aware that tretford is a natural fibre. Ambient humidity (RH) levels >75% at the site are to be avoided and can be mitigated by mechanical extraction if required.**

SEQUENTIAL BATCHING: Please note, in accordance with Australian Standards, tretford Rolls and/or Tile's must be laid in sequential order. If Rolls or Tiles are not installed sequentially, colour variation may occur.

General Requirements & Information:

tretford ROLL is to be installed on dry, clean, and properly prepared subfloors as per AS/NZS 2455.1:2019. Gibbon Architectural are not responsible for any failure of a tretford product which is caused through moisture related issues, poor or incorrect floor preparation, incorrect installation techniques or any other failures which arise through the installer not following these instructions in conjunction with Australian / New Zealand Standards.

Shrinkage or bubbling of the tretford carpet can occur and/or the adhesive bond to the subfloor may be compromised due to the following situations:

1. Moisture in the subfloor
2. Watered down/faulty/incorrect adhesive
3. Insufficient allowances for proper tack of the adhesive before laying in the carpet. If the subfloor requires levelling, use a sand/cement screed.

Bubbling around perimeters can also occur when too much allowance is made for shrinkage and carpet is cut in too tight against walls. tretford does not shrink if correct procedures have been followed.

A primer may be required if installing onto a high porosity sub-floor. Please contact **Gibbon Architectural** for direction.



AU | Installation Instructions - tretford ROLL

SUB FLOOR PREPARATION

Excessive moisture and/or high alkalinity (i.e., high pH) in a concrete substrate can cause the floorcoverings, adhesives, leveling compounds, etc. to fail and therefore all concrete slabs, regardless of age, should be correctly tested for moisture and alkalinity prior to the installation of any tretford carpet.

Even 20-year-old concrete substrates have been known to have moisture issues later in life through changes in the surrounding environment. This includes, but is not limited to, new gardens installed which sit level with or higher than the existing slab thus supplying a potential water source to the existing concrete slab, leaking pipes in or near the slab, new construction work undertaken by the builder during refurbishment of the site where water can be used by numerous different trades.

Dryness shall be considered satisfactory when the relative humidity does not exceed 75%.

tretford 240 Adhesive must be used for all tretford direct stick and dual bond installations, and all moisture testing must be carried out in accordance with tretford 240 installation instructions. Moisture meters that comply with Australian Standards are available for purchase through Gibbon Trade, [Gibbon Trade Moisture Meters](#), and all testing is to be carried out in accordance with the instrument manufacturer's instructions or the moisture test results could be considered to be non-conforming.

Testing the alkalinity of the concrete subfloor

Testing the alkalinity of the subfloor is to be done using either pH test strips or a pH meter, and the manufacturer's instructions should always be followed.

Ensure the concrete surface is porous and free of any old adhesives, primers, curing compounds, surface contaminants, etc. Care is to be taken to ensure the surface is not over cleaned. However, if the surface is burnished or non-porous the surface will need to be removed to allow a mechanical key between the subfloor and the adhesive or leveling compound.

In all cases pH testing must meet Australian Standards and should be done just prior to the installation of the tretford carpet so that the pH readings are taken on the concrete surface that the adhesive or leveling compound is to be installed over.

Undertaking pH testing of distilled or deionized water that is beading on the surface of the concrete substrate or testing a substrate that has just been mechanically prepared, may result in inaccurate pH test results.



AU | Installation Instructions - tretford ROLL

Please note the following:

- All RH and pH test results should be documented and photographed for your records in case there is a moisture related problem in the future.
- RH and pH test results only indicate the RH and pH of the concrete substrate at the time of testing. The RH and pH of the concrete can increase or decrease over time due to outside influences, so it is critical that all test results are documented and photographed at the time of testing.
- Experience has shown that the RH and pH test results tend to be more accurate when the HVAC system has been in operation 24/7 for 2 weeks prior to testing.

Determining the dryness of timber substrates prior to installing tretford ROLL

The moisture content of timber, plywood and particle board subfloors shall be considered sufficiently dry when the moisture content is between 10% - 14%. Suitable testing procedures for timber and particle board subfloors may be found in AS/NZS 1080.1:2012 and suitable testing procedures for plywood subfloors may be found in AS/NZS 2098.11:2015

It is the responsibility of the installation contractor to ensure the substrate is correctly moisture tested, properly prepared prior to the installation of any tretford products and complies with Australian Standards.

The subfloor should be dry, sound and level - as per AS/NZS 2455.1:2019 Please refer to Adhesive Surface Preparation for Tretford 240 below. For more detailed information, download the technical data sheet here: [tretford 240 Technical Data Sheet](#)

Surface Preparation

1. All subfloors must be structurally sound, solid, well-fastened, dry, clean and free of dust, oil, grease, tar, paint, wax, curing agents, primers, sealers, loosely bonded toppings, loose particles and any other substance or condition that may reduce or prevent adhesion.
2. Painted surfaces must be sanded and scarified completely to expose the substrate, using appropriate safety precautions.
3. Various underlayments:
 - a. Concrete subfloors must be dry.
 - b. All wooden floors must be well-ventilated from below.
 - c. Cement terrazzo must be sound, solid, flawless, stripped clean and free of any contaminants or conditions that may prevent or reduce adhesion. Roughen surface by sanding or scarifying using appropriate safety precautions.



AU | Installation Instructions - tretford ROLL

RECOMMENDED ADHESIVE

Specified Adhesive:

tretford 240

Due to tretford's unique construction, the permanent bond adhesive **tretford 240** must be used. Specially formulated with high solids/low water content – **tretford 240** will limit the issue of excessive moisture where shrinkage can occur.

DUAL BOND: Please note tretford 240 must be used to bond both the underlay to the subfloor and carpet to underlay. For further information please see [tretford 240 technical data sheet.](#)

DIRECTIONS FOR USE: All surfaces to be bonded should be dry, smooth, and free of any contaminations that may affect bond. All surfaces must be prepared in accordance with ASNZ 2455:1:2019 textile floor covering – installation practice. It is recommended that all highly absorbent substrates be primed with a suitable primer prior to the application of adhesive. The minimum subfloor temperature before commencing surface preparation and adhesive application is 10°C. tretford 240 should be applied using one of the following notched trowels for your type of installation.

ANY USE OF NON-SPECIFIED ADHESIVES WILL VOID MANUFACTURER'S WARRANTIES. (NO SPOT GLUING).

Adhesive Application

"V1" 1.6mm notched trowel is required for the installation of the recommended dual bond underlay direct to the sub floor.

SPREAD RATE: approx. 5m²/litre

"V2" 2.4mm notched trowel is required for the installation of tretford carpets as a direct stick application direct to sub-floor or to the recommended underlay in a dual bond application.

SPREAD RATE: approx. 3m²/litre



AU | Installation Instructions - tretford ROLL

CARPET ROLL INSTALLATION

** These instructions must be followed to retain Manufacturer's Warranties.*

Direct Stick & Dual-Bond

Spread tretford 240 with the recommended notched trowel and coverage rate (*please refer to previous section on recommended adhesive*). tretford must be 100% adhered to the subfloor – no spot gluing. Place the carpet and press from the centre outwards to exclude air and ensure overall contact with the adhesive. Roll from end-to-end and side-to-side using a 68kg roller. Roll again after 30 minutes.

To avoid problems with shrinkage do not lay tretford into overly wet adhesive. Allow the adhesive to tack-up (dry to a paste like consistency) before lowering the carpet. Tack-up time will depend on atmospheric conditions and on the absorbency of the substrate.

The correct tack-up time can be determined by placing a small piece of carpet into the adhesive. When the carpet is pulled away, strings or cobwebs should be apparent. If the correct tack has not developed, wait five minutes, then re-check every few minutes until cobwebs appear. Double-dropping the carpet into the adhesive or using fans to create air movement can reduce tack-up time.

Shrinkage can only occur if there is:

- a. Excessive moisture in the subfloor
- b. Water content in the adhesive is too high
- c. Insufficient time is allowed for correct tack to build-up or there are significant changes in air humidity during installation.

SHRINKAGE IS NOT ACCEPTED AS A MANUFACTURING FAULT.

AU | Installation Instructions - tretford ROLL

CUTTING THE CARPET: tretford's unique construction allows the carpet to be cut in any direction without fraying. Ribs may be cut diagonally to give a neat finish at all room edges. If butt joints are required, cut the ends to be joined at an angle so that the last ribs on each roll are pushed neatly together to form an invisible join.

tretford should always be installed by 100% adhesion to prevent expansion, contraction and bubbling resulting from changes in humidity.

PERIMETERS: Provision should be made to trim to walls under skirting; otherwise care needs to be taken in trimming carpet at the perimeter. Only cut in around the perimeter once the adhesive has set. Temporary tacking can be an additional safeguard if it is deemed necessary. For dual bond installations, please refer to Dual Bond Installation section.

SEAMS: Seams are to be double cut when installing the light and non-heathered colours – this will ensure a cleaner join.

CROSS-JOINS & SEAMS

Direct Stick: All cross-joins must be joined using Dual-Bond Heat Bond Tape.


Dual Bond: All cross-joins & side seams: to be joined using Dual-Bond Heat Bond tape. Refer to AS NZS 2455.1-2019.

RIBS

Cutting into the middle of a rib when doing cross-joins is unacceptable.

The gap between cross-joins must not be larger than the distance between each rib of the carpet (refer to diagram 1.0). Cut between the ribs and one side bevelled back at an angle to ensure consistent spacing (refer to diagram 1.1).

PLEASE NOTE: If above methods for Cross-Joins, Seams and Ribs are not followed, tretford's warranties will be voided.

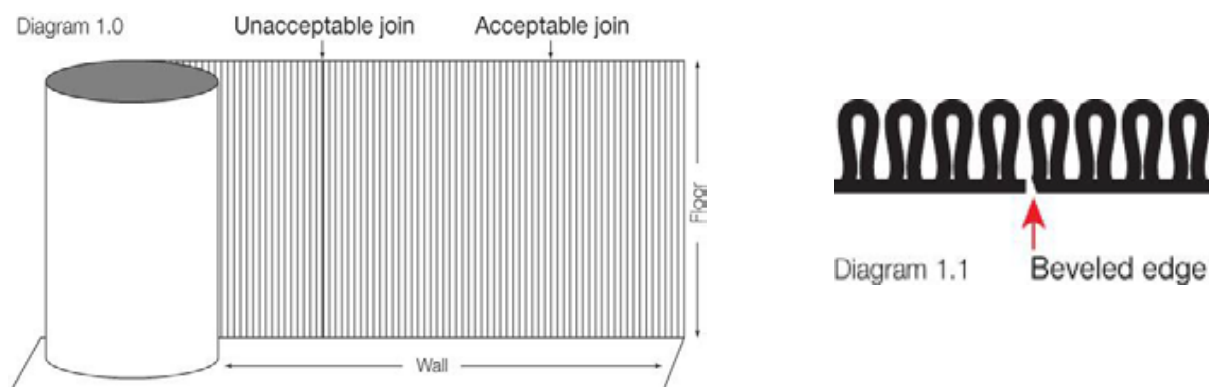



AU | Installation Instructions - tretford ROLL

SPECIFIED UNDERLAYS.

(Note : USE OF NON-SPECIFIED UNDERLAYS WILL VOID MANUFACTURER'S WARRANTIES.)

AIRSTEP CARPET UNDERLAYS

- SENSI SLAB - 4.7mm
- AERO CUSHION - 7mm (Domestic install only)

DUNLOP CARPET UNDERLAYS

- DUNLOP TECHNICS 5 - 5mm
- DUNLOP DURAFIT 7 - 7mm (Domestic install only)

SPECIALISED INSTALLATIONS :

*(Please contact **Gibbon Architectural** for installation instructions.)*

- PLAYGROUND SOFTFALL UNDERLAY SYSTEM

INSTALLATION: The carpet must be 100% adhered to the underlay and the underlay 100% adhered to the subfloor. Do not use a pressure sensitive /release adhesive at any stage. (Refer previous sections re: cross joins/seams and recommended adhesive instruction). Adhesive tack-up time will be longer over underlay as it is non-absorbent.

PERIMETERS: When installing over an underlay, ensure that the carpet is trimmed neatly to wall finish otherwise provision should be made to fit under skirtings. Seams should be located no closer than 15-20cm from the edge of the room to avoid unsightly peaking.

GRIPPER: A further option is to use either architectural or residential GRIPPER to provide additional hold while the adhesive is curing. Because of tretford's construction, it is only possible to fix the gripper down the length of the runs - at either end – which gives more stability at this curing stage. The ribs run across the width making it quite rigid and therefore GRIPPER cannot be successfully fixed down these side seams, i.e., 2 of the walls would have GRIPPER fixings.

PLEASE NOTE: Always ensure that the correct profile of GRIPPER is used to match the profile of the underlay used. It is ultimately up to the discretion of the installer and Gibbon Architectural will not be held liable for any issues related to installations where GRIPPER has been used.

AU | Installation Instructions - tretford ROLL

CARPET ROLL INSTALLATION - General Notes

Ribs

tretford's ribs run across the roll.

Direction

tretford must be installed in same direction to avoid an illusion of shade variation. This is done by keeping the line marked on the back of each roll always to the same side.

Light Source

It is recommended that rolls be laid with the ribs running perpendicular to the principle light source. Please note, if the cord runs parallel to the light source or if there is very strong overhead lighting, a reflection off the backing may be visible between the ribs until the carpet has settled in. This is not a manufacturing fault. It does not indicate below standard tuft weight and is only visible when the carpet is newly laid.

Shading Matching

tretford carpet is a natural fibre product. Different production runs of the same product may therefore be subject to shade variation. This is not a defect or a manufacturing fault. Please loose lay all widths to ensure shade match prior to the final adhesion. All carpet must be laid in the same direction and laid sequentially.

Installation on Stairs

In contract situations stair nosing should be used. In residential situations, tretford sheet should be conventionally installed using good quality underlay. Generally, ribs will be laid landscape running across the stair.

Under Floor Heating

Both tretford and the recommended adhesives are suitable for use over an in-floor heating system; however, it is recommended that the heating be switched off for 48hrs prior to, and for 48hrs after installation. Temperature is to be increased gradually when turned back on.

PLEASE NOTE: *tretford cannot be used in installations where a blanket type heating system is used.*

AU | Installation Instructions - tretford ROLL

Installation on Walls

tretford can be installed as an acoustic wall covering on any clean, dry, smooth surface such as concrete, dry wall, plaster (not directly over gypsum-based substrates), particle board, metal, plastic, laminate or plywood (min thickness 12mm or ½"). Do not install over wallpaper or vinyl wall coverings.

When installing tretford on walls with ribs running vertically, run full sheet along ceiling line to keep seam below eye level (refer to diagram 2.0) - avoid locating horizontal seams at eye level.

Illustration...

